 


Digital Earth Resistance Tester Software Help

Method 1: Click setup icon



to install, if

failed please try method 2.

Method 2: No need to install, two steps to get to run.

(1) Open the file named “Support”.

(2) Find the icon



DIGITAL EARTH
TESTER.exe

and double click it to run

directly.